## **Deluxe Display**

# **VIKING CARGO BIKES**

#### Adjust up

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

#### Power level

Shows how much power is left in the battery

#### Speedometer

Shows who fast you are driving in Km/h

#### **SET**

For adjustment of tripcounter, distance, wheel size and light on the display

#### Km/Mile

Change, pres + and simultaneously for 4 sec

## On / off

Turns the system (display and motor)

#### Assist level

Shows who much the motor is assisting you in driving. Level 1-6

#### Voltage

Shows how much voltage is on the battery

#### Battery level

Shows ow much power is left in the battery

#### Adjustment down Adjustment of eg. Assist


on and off

#### Kilometer counter/Odometer Shows how many kilometers the bike

has driven in total

# Display Colour Model VIKING of Ultimate Curve



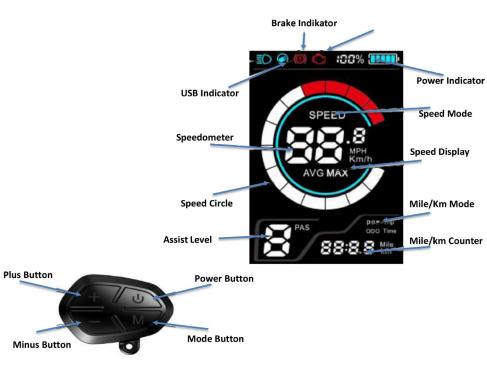

## Display Model Ultimate Curve





Shows ow much power is left in the battery

#### Adjust up

Adjustment of eg. Assist Also activates backlight in battery

- Press down for 2 sec.

#### Speedometer

Shows who fast you are driving in Km/h

#### Assist level

Shows who much the motor is assisting you in driving. Level 1-9

#### Adjustment down

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Hold down for 2 sec, and the bike will drive

on its own, stops when button is released

On / off

Turns the system (display and motor) on and off

#### Speedometer

**VIKING** 

**CARGO BIKES** 

Shows who fast your are driving in Km/h

# Additional Model Display

#### Adjust up

Adjustment of eg. Assist

Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

#### Battery level

Shows ow much power is left in the battery

#### Loading

Shows how much the motor and battery is loaded

#### Speedometer

Shows who fast you are driving in Km/h

#### SET

For adjustment of tripcounter, distance, wheel size and light on the display

#### Km/Mile

Change, pres + og - simultaneously for 4 sec

#### On / off

Turns the system (display and motor) on and off

#### Assist level

Shows who much the motor is assisting you in driving

### Adjustment down

Adjustment of eg. Assist

#### Kilometer counter/Odometer

Shows who many kilometers the bike has driven in total